

AMIAD Water Systems Ltd.

Filtomat MG112 Electronically Controlled

| | |
|--------------------|-------|
| Serial Number: | _____ |
| Order Number: | _____ |
| Catalog Number: | _____ |
| Filtration Degree: | _____ |
| Tested By: | _____ |

Installation, Operation and Maintenance Instructions



Ref: 910101-000516 / 02.2022

Original Instructions

AMIAD Water Systems Ltd.

Filtomat MG112 Electronically Controlled

This document is the user-manual of the Filtomat MG112 Electronically Controlled filter. It describes the installation, the operation and the maintenance procedures of the filter.



Disclaimer:

Copyright © 2018 Amiad Water Systems Ltd. All rights reserved.

The contents of this document, including without limitation all information and materials, images, illustrations, data, drawings, names and any other such materials that appear in this document are the sole property of Amiad Water Systems Ltd., including any intellectual property rights, whether registered or not, and all know-how contained or embodied therein. Amiad may alter, remove or change the Content without any further notice. You may not reproduce, copy, modify, create derivative works from, sell or participate in any sale of, or exploit in any way, in whole or in part, any of this document or its content.

The confidential nature of and/or privilege in the file enclosed is not waived or lost as a result of a mistake or error in this file. If you received this file in error, please notify Amiad immediately at info@amiad.com.

This document does not replace any certified drawing, procedure or information provided by Amiad in reference to a specific customer, site or project.

Amiad assumes that all users understand risks involved within this file and/or its attached materials. This document is given in good faith and is not intended to impose any obligation to Amiad. While every effort has been made to ensure the information in this manual is accurate and complete, we would appreciate if you can bring any errors or omissions to the knowledge of Amiad or consult Amiad experts or its authorized representatives if you have any questions.

Amiad Water Systems Ltd. D.N. Galil Elyon 1, 1233500, Israel Tel: 972 4 690 9500 | Fax: 972 4 814 1159 Email: info@amiad.com

TABLE OF CONTENTS

| | |
|--|-----------|
| TECHNICAL SPECIFICATIONS | 4 |
| SAFETY INSTRUCTIONS | 5 |
| DIMENSIONAL DRAWINGS | 8 |
| INTRODUCTION | 9 |
| GENERAL DESCRIPTION | 9 |
| BASIC FILTER OPERATION | 9 |
| HOW THE SELF-CLEANING CYCLE WORKS | 9 |
| INSTALLATION | 10 |
| DESIGN RECOMMENDATIONS | 10 |
| PREPARATIONS FOR INSTALLATION | 11 |
| INSTALLATION INSTRUCTIONS..... | 11 |
| IMPORTANT! | 11 |
| FIRST-TIME OPERATION | 11 |
| MAINTENANCE | 12 |
| CHECKING THE FILTER..... | 12 |
| WINTERIZATION | 12 |
| REMOVING THE SCREEN AND THE DIRT COLLECTOR | 13 |
| RE-INSTALLING THE SCREEN AND THE DIRT COLLECTOR | 18 |
| PARTS SCHEDULE MG112 | 20 |
| PARTS DRAWING MG112 | 21 |
| CONTROL TUBES SCHEME MG112 | 22 |
| DIRT COLLECTOR - PARTS SCHEDULE & PARTS DRAWING | 23 |
| COVER - PARTS SCHEDULE & PARTS DRAWING | 24 |
| AMIAD LIMITED WARRANTY | 25 |

With any inquiry please quote Filter Serial Number, located on the filter housing.

TECHNICAL SPECIFICATIONS

General

| | | | |
|--------------------------|-------|--|---|
| Maximum flow rate | MG112 | 525 m ³ /h; 2313 USgpm | Consult manufacturer for optimum flow depending on filtration degree & water quality. |
| Min. Working pressure | | 2.0 bar; 30 psi | Or lower if pressure is increased for flushing |
| Max. Working pressure | | 10 bar; 150 psi | |
| Total Filtration area | | 26,670 cm ² ; 4,134 in ² | |
| Net Filtration area | | 20,400 cm ² ; 3,162 in ² | |
| Inlet/Outlet diameter | | 300 mm, 12" | Flange standards as per request. |
| Max. Working temperature | | 60 °C; 140 °F | |
| Empty weight MG112 | | 480 kg / 1054 lb | |

Flush data

| | | |
|---------------------------|---|-----------------------------------|
| Exhaust valve | 40 mm; 1 1/2" | Three flushing valves |
| Flushing cycle time | 45 seconds | Depending on the working pressure |
| Wasted water per cycle | 375 liter; 105 US gallon | at 2 bar; 30 psi |
| Minimum flow for flushing | 60 m ³ /h; 260 US gpm | at 2 bar; 30 psi |
| Flush criteria | Differential pressure of 0.5 bar; 7psi, time and manual operation | |

Construction materials

| | |
|--------------------|---|
| Filter housing | Epoxy-coated carbon steel 37-2 (St. St. 316 available on request) |
| Filter lid | Epoxy-coated carbon steel 37-2 |
| Coarse screen | Reinforced nylon |
| Fine screen | Stainless Steel 316, molded plastic support structure |
| Cleaning mechanism | PVC and Stainless Steel 316L |
| Motor assembly | Reinforced nylon, brass, stainless steel |
| Hydraulic piston | Stainless Steel 316, brass |
| Control tubing | Polyethylene |
| Seals | BUNA-N |
| Control | Aluminum, Brass, Stainless Steel 316, PVC |

Filtration degrees available

| Type | Molded screen | | | | | |
|--------|---------------|-----|-----|------|-----|------|
| Micron | 500 | 300 | 200 | 130 | 100 | 80 |
| mm | 0.5 | 0.3 | 0.2 | 0.13 | 0.1 | 0.08 |

Safety Instructions

General Safety Instructions

- Amiad filtration products always operate as components in a larger system. It is essential for the system designers, installers and operators to comply with all the relevant safety standards.
- Prior to installation, operation, maintenance or any other type of action carried out on the filter, read carefully the safety, installation and operation instructions.
- During installation, operation or maintenance of the filter all conventional safety instructions should be observed in order to avoid danger to the workers, the public or to property in the vicinity.
- Please note: The filter enters into a flushing mode automatically, without prior warning.
- No change or modification to the equipment is permitted without a written notification given in advance by the manufacturer or by its representative, on the manufacturer's behalf.
- Always observe standard safety instructions and good engineering practices whilst working in the filter's vicinity.
- Use the filter only for its intended use as designed by Amiad, any misuse of the filter may lead to undesired damage and may affect your warranty coverage. Please consult with Amiad prior to any non-regular use of this equipment.
- Obey and comply with the instructions given by each safety stickers found on the filter.

Installation

General

- Install the filter according to the detailed Installation Instructions provided with the filter by the manufacturer and according to the description given in this manual.
- Make sure to leave enough clearance so as to enable easy access for future treatments and safe maintenance operations.
- The user should arrange suitable lighting at the area of the filter to enable good visibility and safe maintenance.
- The user should arrange suitable platforms, ladders and safety barriers to enable easy and safe access to the filter without climbing on pipes and other equipment. The user should verify that any platform, barrier, ladder or other such equipment is built, installed and used in accordance with the relevant local authorized standards.
- Check and re-tighten all bolts during commissioning and after the first week of operation.
- Use only appropriate standard tools and equipment operated by qualified operators when installing, operating and maintaining the filter.
- When installation is required in hazardous environment sites, underground or high above ground, make sure that the site design and the auxiliary equipment are appropriate and that installation procedures are carried out in accordance with the relevant standards and regulations.
- Ensure walking areas about the installation are slip free when wet.

Shipment and transporting

- Shipping and transporting the filter must be done in a safe and stable manner and in accordance with the relevant standards and regulations.
- For shipping, lifting and positioning the filter, use only approved lifting equipment and authorized employees and contractors.

Electricity

- Electric wiring should be performed by an authorized electrician only, using standardized and approved components.
- Install a **lockable** main power cut-off switch close to the control panel.
- If due to site constraints, the control panel is installed without a clear line-of sight of the filter, an additional **lockable** power disconnect cut-off switch should be installed near each filter unit.
- Installation of the filter should be performed so as to avoid direct water splashing on the electrical components or on the control panel.

Pneumatics

- Install a **lockable** main cut-off switch, **featured with a pressure release mechanism**, on the compressed air supply line close to the control panel.
- If the control panel is installed far away and there is no eye contact with the filter, a **lockable** compressed air cut-off switch, **featured with a pressure release mechanism**, should be installed near each filter unit.
- The user should make sure that the compressed air supplied to the filter never exceeds the maximum designated pressure for this filter. An air-pressure reduction valve should be installed on the compressed air supply line upstream of the filter's pneumatic inlet port.

Hydraulics

- Extra safety devices should be installed on hot water applications to avoid skin burn danger.
- The user should install a manual Water Cut-off Valve next to the filter's inlet port.
- In cases where the downstream piping network downstream of the filter is pressurized an additional manual Water Cut-off Valve should be installed next to the filter outlet port.
- The user should make sure that the system includes a Pressure Release / Drainage Valve to enable release of residual pressure prior to any maintenance procedure performed on the filter.
- The user should make sure that the filter is never exposed to water pressure exceeding the maximum designated pressure for this filter, if needed a Pressure Reduction Valve should be installed upstream of the filter's water inlet port.
- Please note that the maximum working pressure indicated at the filter's specifications table includes the pressure caused by fluid hammer and pressure surge effects.

Civil Engineering

- Make sure that the filter installation is done by Amiad qualified technicians.
- Make sure that any civil engineering work at the installation site such as construction, lifting, welding, etc. is done by qualified workers / technicians / contractors and in accordance with the relevant local standards.
- While using lifting equipment, make sure that the filter or the lifted part is chained securely and in a safe manner.
- Do not leave lifted equipment if there is no necessity. Avoid working below lifted equipment.
- Wear a safety helmet while using lifting equipment.
- Make sure that the flooring is sloped for drainage and to avoid accumulation of liquids.

Commissioning

- Read carefully the Commissioning and the First Start-up Operation instructions prior to any attempt to operate the filter.
- In order to achieve maximum performance and smooth operation of the filter it is crucial to perform the Startup and First Operation procedures exactly as described in this manual.
- Commissioning the filter should be done by an authorized Amiad technician, do not attempt to commission the filter unaccompanied since this may lead to undesired damage and may affect your warranty coverage.

Operation and Control

- Do not operate the filter before reading carefully and being familiar with its operation instructions.
- Observe the safety stickers on the filter and never perform any operation contradicting the instructions given.
- Never operate or use the filter for purposes other than its original design and operational envelope.

Maintenance

Before any maintenance or non-regular operation please read the following:

- Servicing the filter should be done only by technicians authorized by Amiad.
- Disconnect the filter from the power supply and lock the Main Power Switch.
- Disconnect the compressed air supply, release the residual pressure and lock the Pneumatics Main Valve.
- Disconnect the filter from the water system by closing and securing the Manual Inlet Valve. In cases where the downstream piping network is pressurized, close and secure the Manual Outlet Valve also.
- Release the residual water pressure by opening the Pressure Release / Drainage Valve.
- Empty the filter by opening the Drainage Valve.
- In hot water systems wait till the filter components cool off to a safe temperature.
- Place warning signs around the work area as required by the local standards and procedures.
- Inspect the filter's safety stickers and replace any damaged or faded sticker.


Mechanical

- When working on the filter use only appropriate standard tools.
- Always open and close valves slowly and gradually.
- Remove grease and fat material residues in order to avoid slipping.
- Before disconnecting the filter from the water supply, electricity and pneumatics and before releasing the filter's residual pressure do NOT:
 - loosen or unscrew bolts
 - remove any protection cover
 - open any service port flange
- Avoid splashing and water leakage so as to minimize slippage, electrification or damage to the equipment, caused by moisture.
- While using lifting equipment, make sure that the filter or the lifted part is chained securely and in a safe manner.
- Do not leave lifted equipment if there is no necessity. Avoid working below lifted equipment.
- Wear a safety helmet, goggles, gloves, and any other personal safety equipment required by the local standards and regulations.
- Human entry into a filter must be done in accordance with the relevant local safety instructions, standards and regulations for working in hazardous environment.
- Manual cleaning of filter media using high water pressure or steam should be performed in accordance with the cleaning system instructions, the local standards and regulations and without endangering the operator or the vicinity
- Manual cleaning of filter element using acid or other chemical agents should be performed in accordance with the relevant material safety instructions, the local standards and regulations and without endangering the operator or his vicinity.

Before returning to regular operation

- Re-assemble any protection covers or protection mechanisms removed during service or maintenance operations.
- Make sure that all the tools, ladders, lifting devices, etc. used during the maintenance procedures are taken away from the filter area and stored
- In order to return the filter to regular operation, follow the First Start-up Operation instructions as detailed in your user manual.
- For filters used in potable water systems it is required to disinfect the filter according to the local water authority standards and regulations before putting it back to service.

Dimensional Drawings

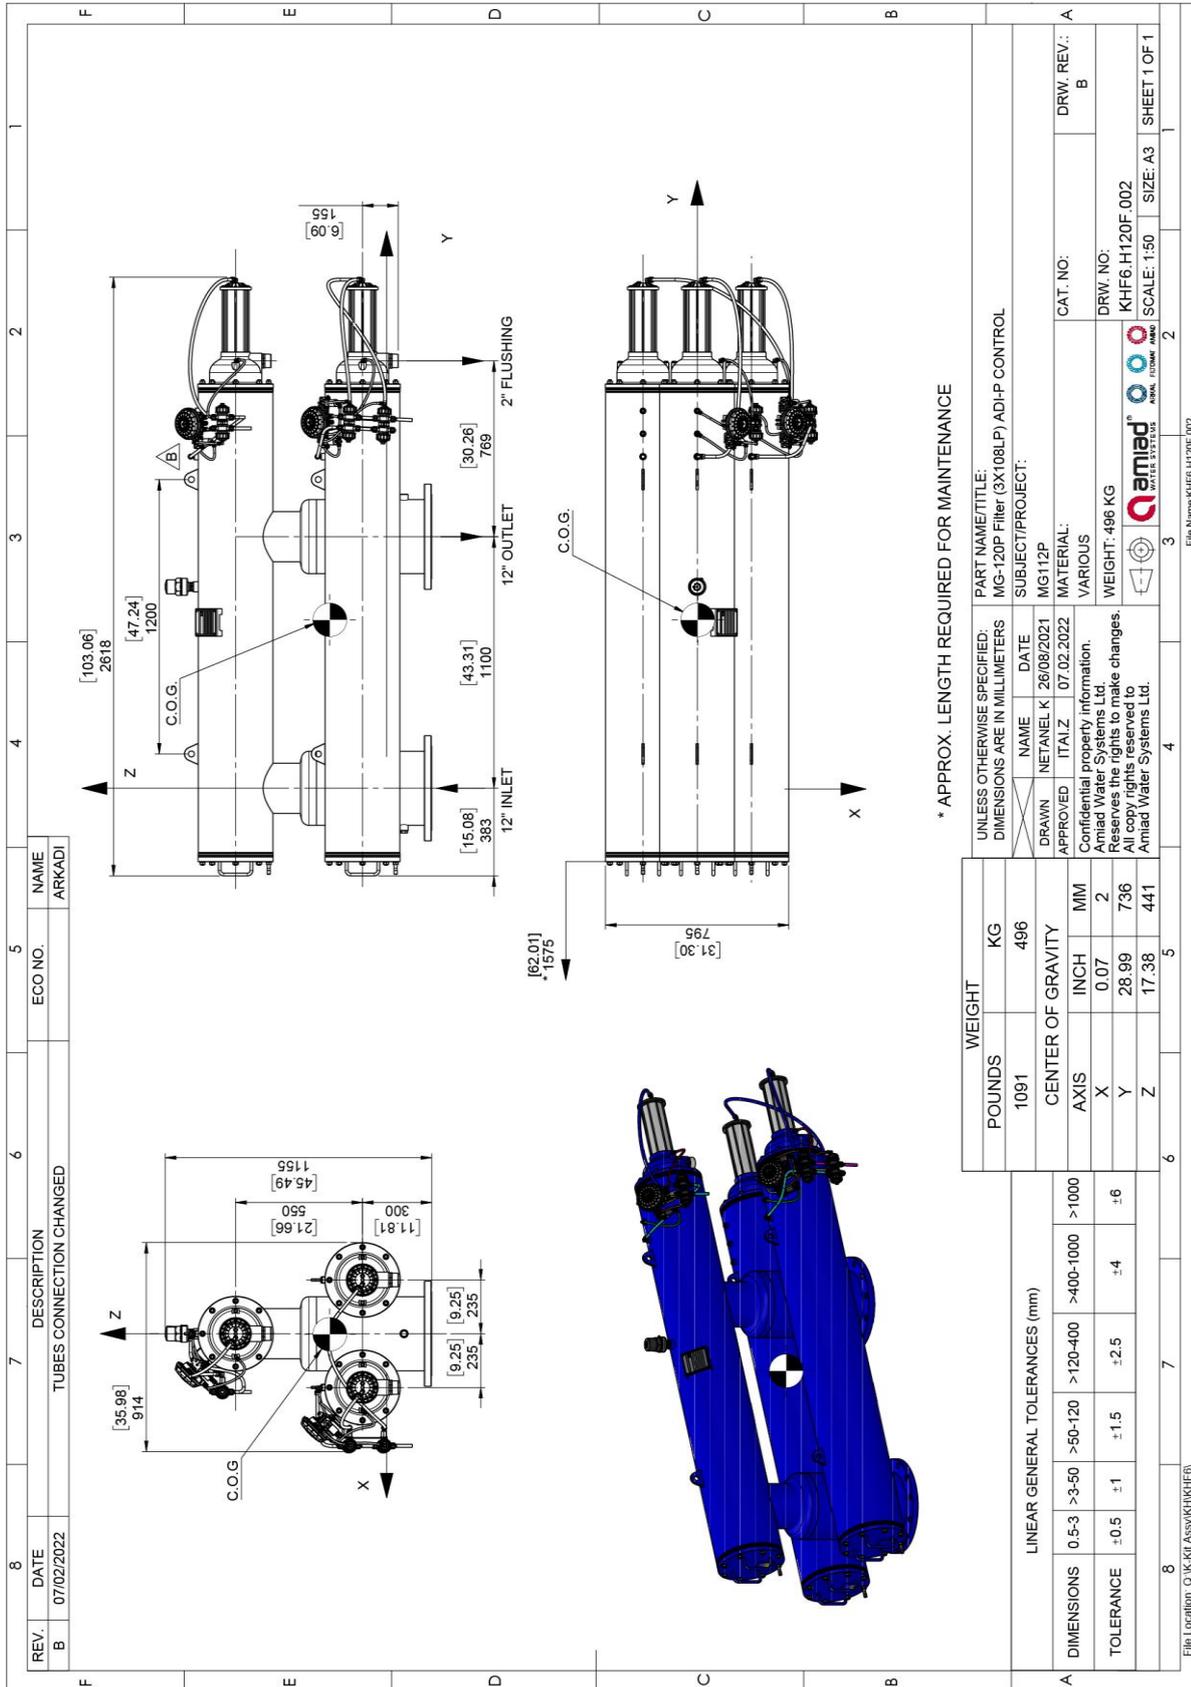

Introduction

General Description

The **FILTOMAT MG112** is a sophisticated, yet easy-to-operate automatic filter, with a self-cleaning mechanism driven by a hydraulic turbine. It is designed to work with various types of screens in filtration degrees from 500 to 80 micron, and is available in 10" inlet/outlet diameter.

The **FILTOMAT MG112** filter is configured to meet your specific needs according to flow rates and water quality. The filter can be installed as a stand-alone unit for low flow rates, or assembled in a group on a manifold when high flow rates and/or a large screen area are required. The filters are delivered fully assembled, requiring simple connections to the inlet and outlet, and to the drain.

Basic Filter Operation

Water enters the filter from the inlet pipe, and passes through a coarse screen, which protects the automatic cleaning mechanism from any large particles or debris. The coarse screen is not cleaned automatically, and should not accumulate large quantities of solids. The water then flows through a fine screen which filters out the smaller particles. Water that has passed through the fine screen is clean and passes into the outlet pipe. Particles of dirt accumulate on the fine screen and form a "filtration cake," which starts to restrict water flow. As the restriction, or clogging, increases, the pressure in the outlet pipe becomes lower than in the inlet pipe. When the pressure differential reaches a pre-set value, a self-cleaning cycle is initiated. The self-cleaning cycle takes approximately 45 seconds and does not interrupt the flow of water through the filter.

How the Self-Cleaning Cycle Works

At a preset pressure differential (0.5 bar —7 psi), which is detected by a pressure differential switch, the flushing controller operates pulse solenoids which allow water to flow to the relay valves, which then activate the hydraulic pistons and open a valve to the rotor chamber (See Figures 2 below). The water from the rotor chamber flows out the drain. The pressure in the rotor chamber drops, releasing a strong flushing stream that flows through the filter.

This drop in pressure and corresponding release of the backflush stream create a suction effect at the nozzle inlets. This effect actuates spot cleaning directly in front of the openings of each nozzle at the inner side of the fine screen. The water and particles passing through the hydraulic rotor cause the suction scanner to rotate, and the piston moves in an axial direction to the opposite end of the filter.


The combination of rotational and axial movement of the suction scanner assembly ensures that the nozzles sweep the entire inner side of the fine screen in a spiral pattern.

When the first stroke is completed, the flushing valve closes and after a short interval the flushing controller activates the second backflush stroke. The suction scanner assembly spins, moving with the piston in the opposite direction and returning to its original position.

This self-cleaning process takes about 45 seconds, depending on the operating pressure.

It is essential that there be at least 2 bar pressure at the inlet to the filter for proper cleaning to take place during flushing.

The flushing controller may be operated by pressure differential, manual activation, or by timer.

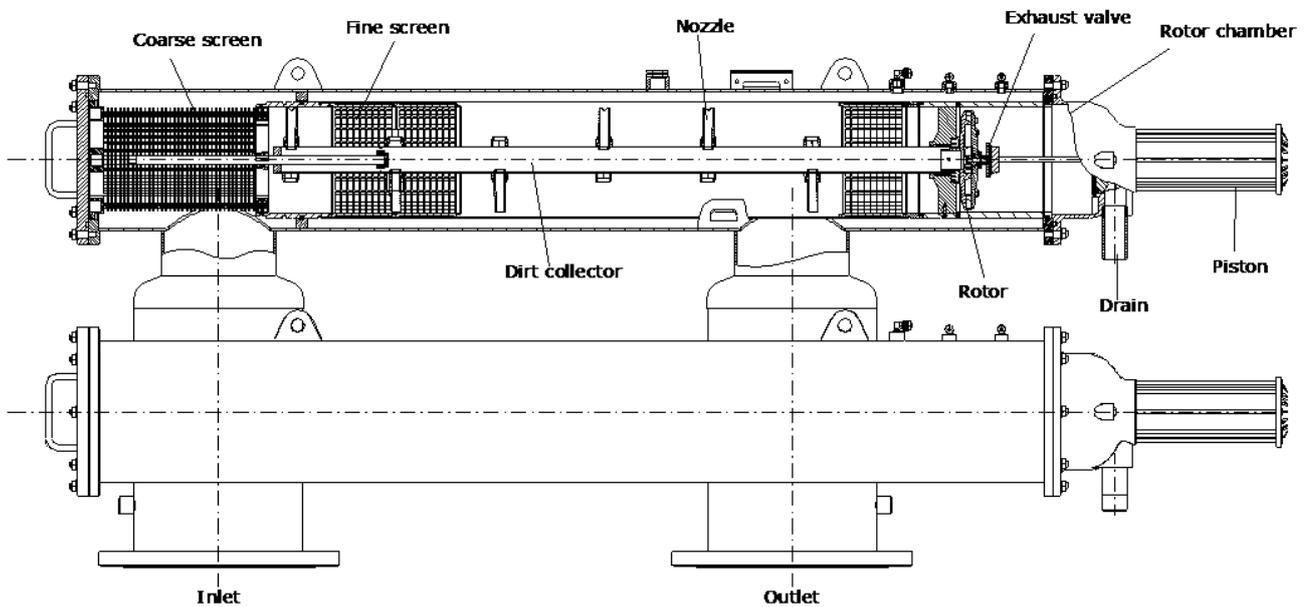

Installation

Design Recommendations

- The inlet and outlet pipes must be the same or a larger diameter than the inlet and outlet diameters of the filter.
- The upstream pressure source should not drop below 30 psi (2 bar) during the rinse cycle. If this cannot be ensured, consult the manufacturer.
- If a prolonged pipeline fill time causes a temporary high flow and low pressure situation, it is recommended that you install a pressure sustaining valve downstream of the filter. The pressure sustaining valve will ensure a controlled fill-up of the line.
- If continued water delivery is essential even during “down time” maintenance periods, it is recommended that a manual or automatic by-pass be installed, and that isolating valves be installed up and downstream of each filter unit for isolation purposes.
- Shut off valves must be installed in the inlet and outlet lines to enable maintenance.
- A non-return valve should be installed where water hammer or back flow may be a problem.
- The filter must be installed in the direction of flow indicated by the arrow on the filter body.
- Secure the drain pipe so that there is no movement during flushing.
- The highest point of the drain pipe should be no more than one half meter above the filter.
- The drain pipe must allow free flow and be free of restrictions.

Preparations for Installation

- Ensure suitable lighting at the area of the filter to enable good visibility and safe maintenance.
- Arrange suitable platforms and safety barriers to enable easy, safe access to the filter.
- Allow a convenient approach and enough space for dismantling and maintenance.

Installation Instructions

- Ensure the direction of flow is according to arrows marked on the filter housing
- Install a drain valve in place of one of the pipe plugs in the inlet or outlet pipe on the installation manifold.

Important!

- **Prevent static back pressure or reverse flow through the filter.**
- **Install a manual or a hydraulic valve downstream of the filter.**
- **The filter may enter flushing mode automatically, without warning.**

First-time Operation

1. Remove a plastic plug from one of the outlet holes on the top of the filter to bleed air from the filter.
2. Open the inlet valve.
3. Close the plastic plug when all the air is bled from the filter.
4. Make sure the filter is clean and dry.
5. Check all fittings and flanges for leaks.
6. Open the outlet valve.
7. Perform manual flushing, by selecting "Manual" in the flushing controller.
8. Check that the inlet pressure does not drop below 2 bar during flushing.

The filter is ready for operation. Observe at least one automatic flushing cycle, activated by time or differential pressure.

Maintenance

NOTE: Depressurize the filter before maintenance (close inlet, and then outlet valve).

Checking the Filter


1. Unscrew the filter lid's long bolt; **for safety reasons do not remove its nut!**
2. Unscrew and remove the other nuts from the filter's lid bolts. Do not remove the long bolt's nut!
3. Open the lid by pulling it carefully; leave it to hang on the long bolt. **Do not remove the long bolt's nut!**
4. Extract the coarse screen and clean if necessary.
5. Extract the fine screen and clean if necessary. Cleaning may be performed by hosing the screen from outside-in, and/or with a nylon brush.
6. Check the O-rings of the fine screen and apply grease, if necessary.
7. Reassemble the fine screen and the coarse screen.

NOTE: Check that the dirt collector shaft is properly aligned in the bearing.

8. Close the filter's lid by turning it back to its original close position and fasten the nuts.
9. Perform the procedure described on the "**First Operation of Filter**" paragraph of this document.

Winterization

Filter operations should be suspended in climates where the filter is exposed to freezing temperatures.

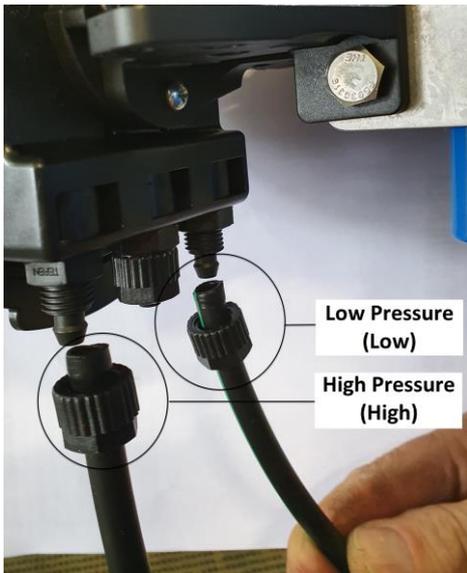

1. Check that the outlet isolating valve is closed and perform two manual rinses.
2. Close the inlet valve to the filter and release the pressure.
3. Mark the tubes that are linked to the ADI-P controller and disconnect it from the controller for the duration of the winter season.
4. Remove the following items from the filter and store in a dry place:
 1. Top lid assembly
 2. Coarse and fine screen assembly
5. Apply grease to the O-rings of the fine screen before storing.

At the beginning of the operation season, reassemble the filter elements and check the "**Preparations**" and the "**First Operation of the Filter**" paragraphs of this document.




Servicing

Draining the Filter

1. Close the filter's upstream (inlet) valve.
2. Close the filter's downstream (outlet) valve and isolate the filter from the water system.
3. Use the manual start function of the electronic flushing controller and start a flushing cycle to release the pressure of the filter housing.

Removing the Screen and the Dirt Collector


1. Drain the filter as described above.
 2. Unscrew and remove the nuts from the filter's lid bolts [1] **but do not remove the long bolt nut!** [2]
 3. Open the lid by pulling it [3] and carefully leave it to hang on the long bolt [4]. **Do not remove the long bolt's nut!**
- Note: Attempting to remove the screen from the piston-side of the filter will cause damage to the system.

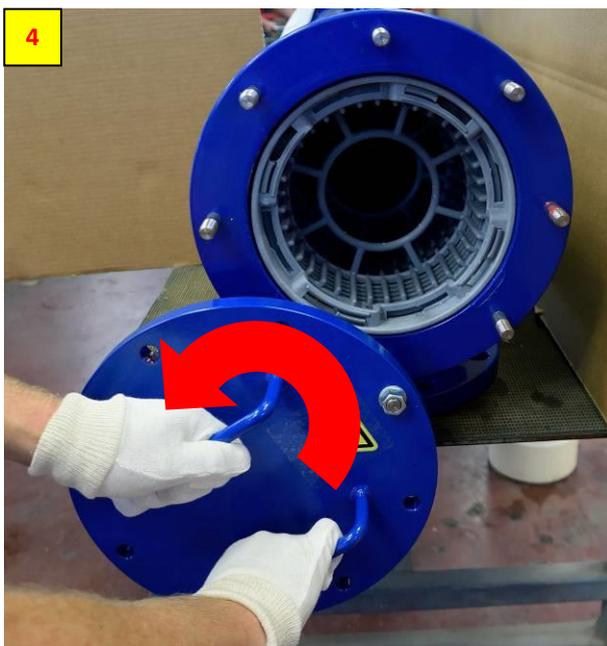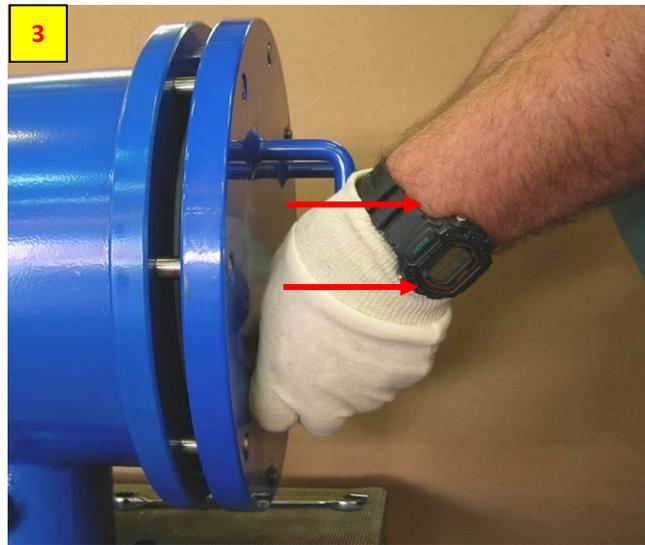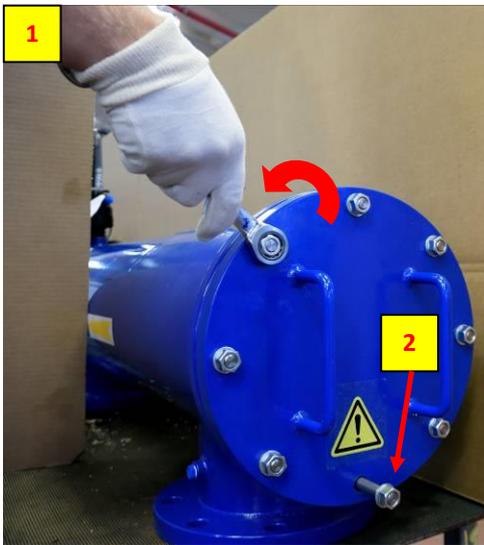


4. Pull the coarse screen out of the filter housing.








5. Pull the fine screen out of the filter housing. If it is difficult to release the screens use Amiad's Push Pull Tool (Catalog Number 7001900-001985) to extract the screen by performing the following procedure:
 - A. Assemble the tool by inserting the fork shape part into the lever handle.
 - B. Insert the fork shape part over the dirt collector shaft.
 - C. Turn the tool clockwise until the fork teeth catch the fine screen handle.
 - D. Lay the tip of the tool's lever handle on one of the filter's housing cover bolts (in order not to damage the filter paint coating) and secure the joint pin.
 - E. Pull the handle firmly to release the screen.
 - F. Pull the screen out of the filter housing.

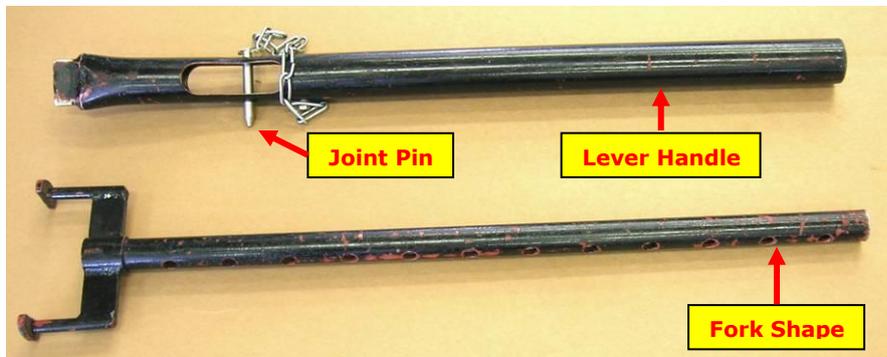




A

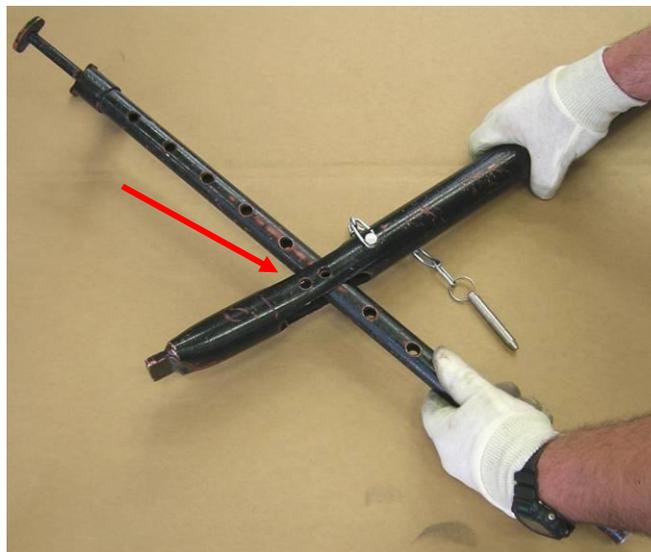

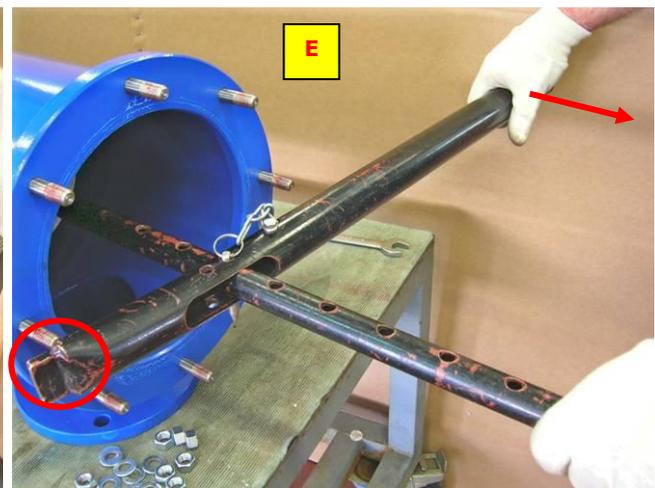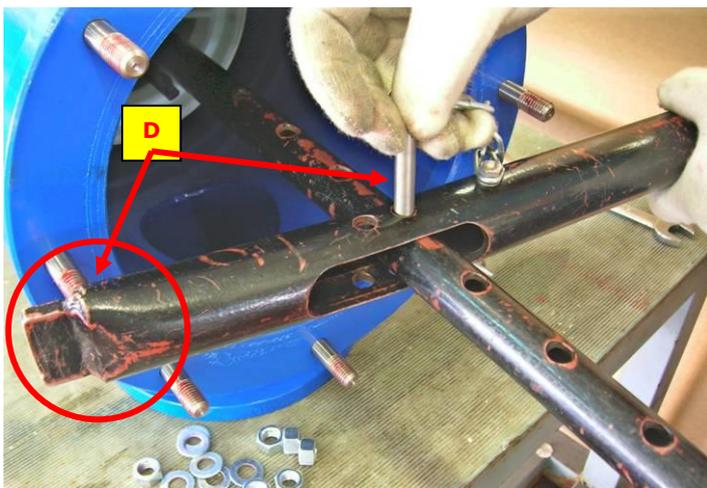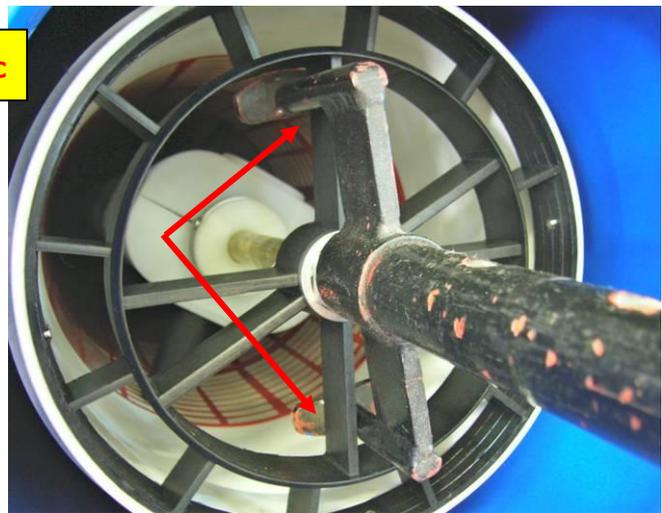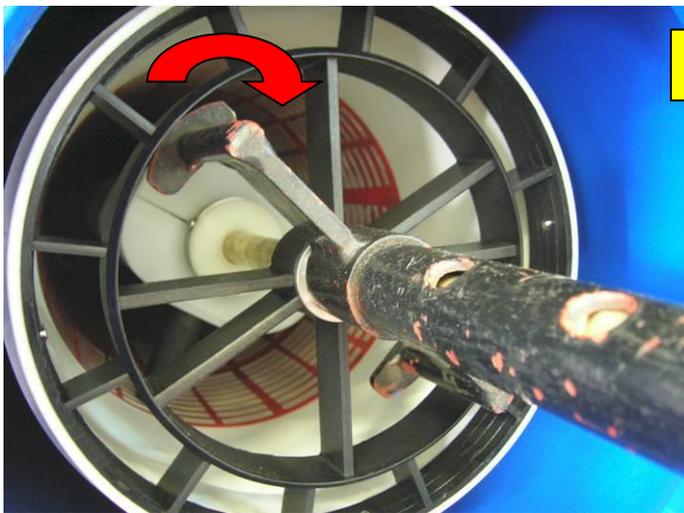

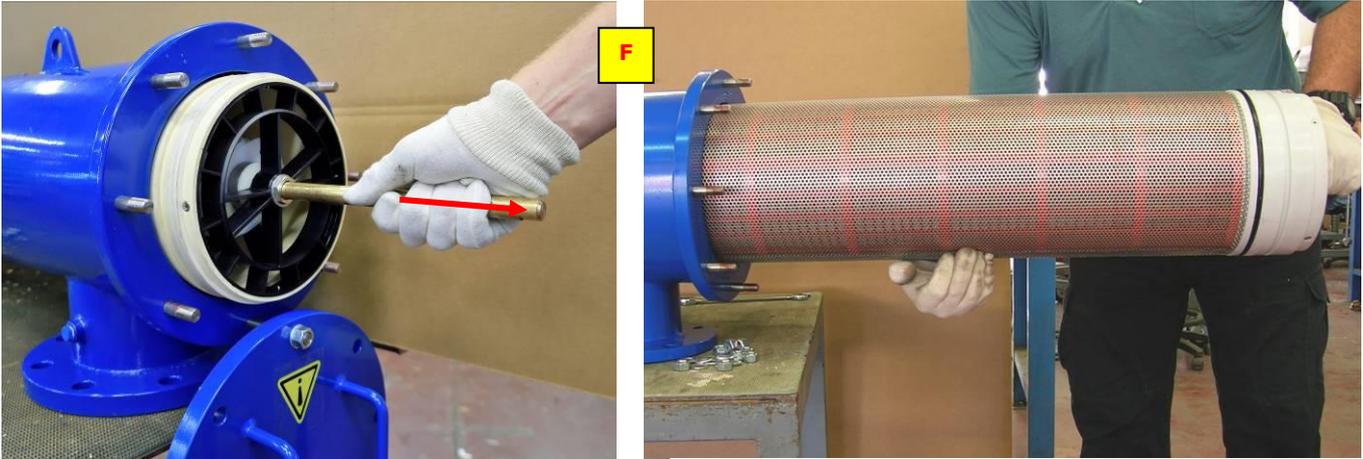


6. Depending on the actual diameter of your filter use two units of Amiad's Screen Separation Tool (Catalog Number 700190-001985 for 2"-8" , 700190-002139 for 10"-12" or 700190-002150 for 14"-16" filters) to separate the Chamber Flat Screen and the Dirt Collector from the Fine Screen.

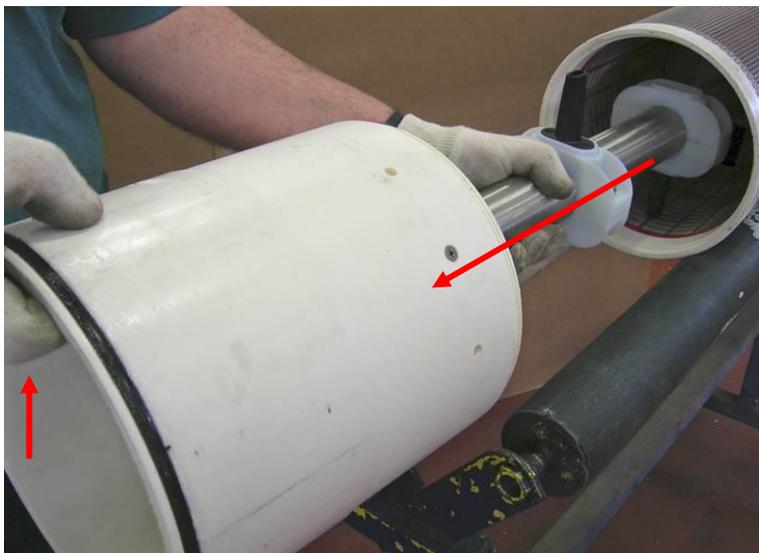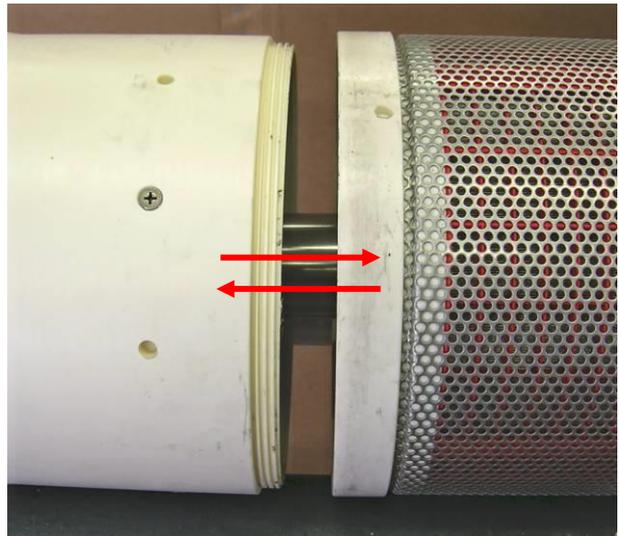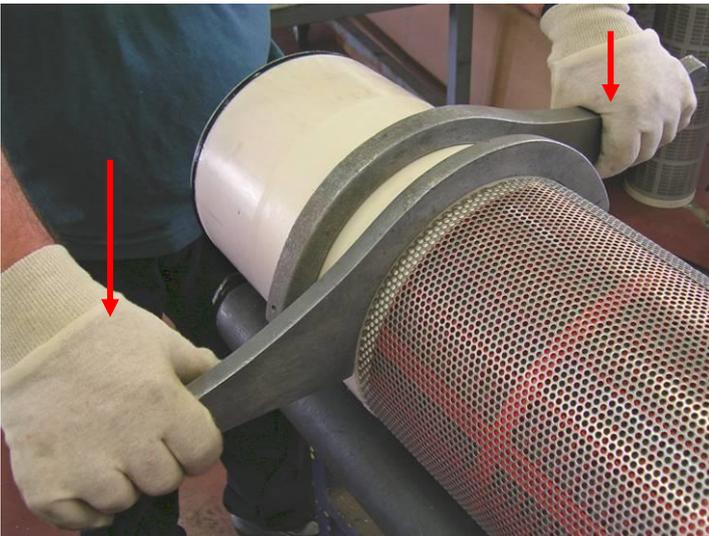

Re-installing the Screen and the Dirt Collector


1. Insert the Dirt Collector to the Fine Screen. Make sure that the first suction nozzle of the Dirt Collector (A) is pointing downwards when inserted into the Fine Screen.

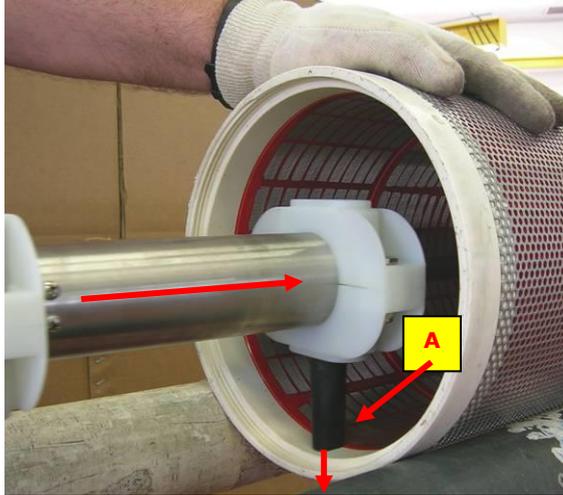


2. Use the two Amiad's Screen Separation Tools to reconnect the Chamber Flat Screen and the Fine Screen.




3. Insert the fine screen back to the filter housing (A). Use the fork part of the Push Pull Tool to lift the screen and push it through the last few centimeters till it is correctly seated in the filter housing (B).



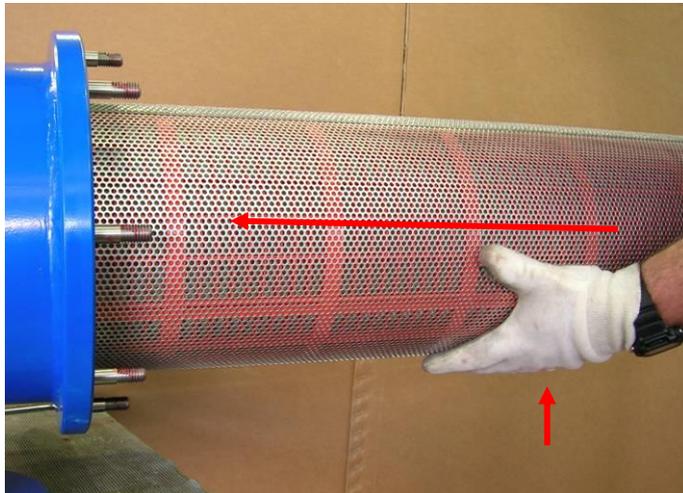


A

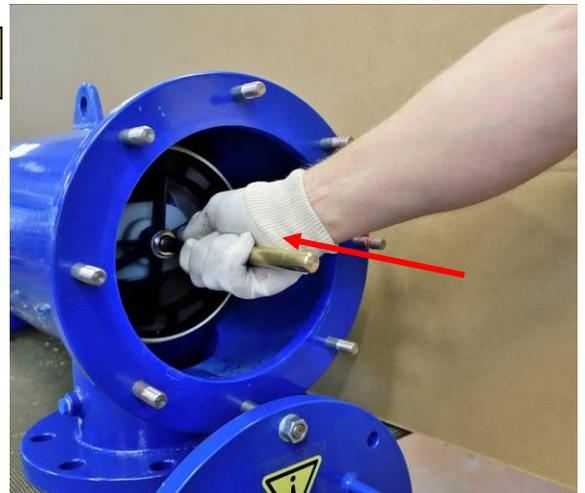

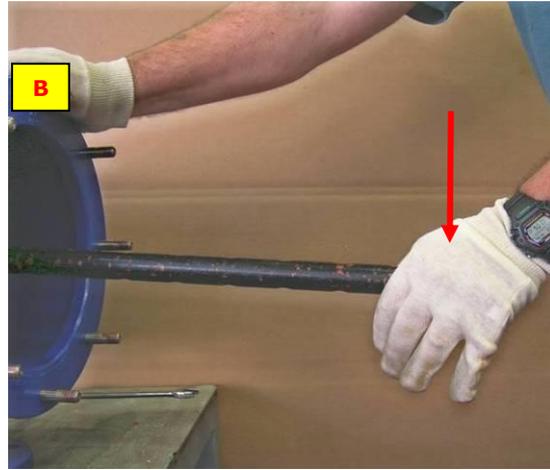



4. Insert the Coarse Screen back to the filter housing (A), return the filter's lid back to its closed position (B) and re-tighten the lid bolts nuts (C).

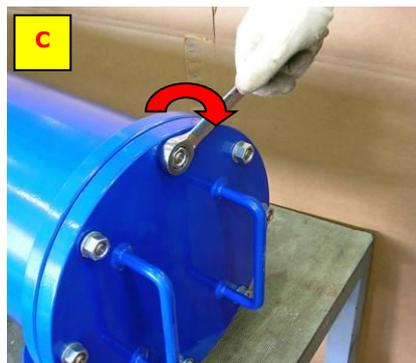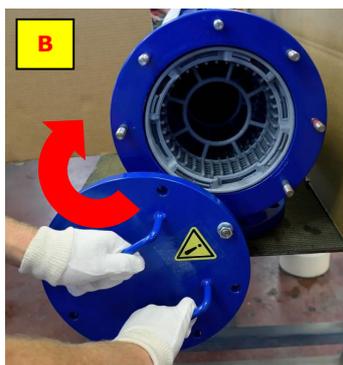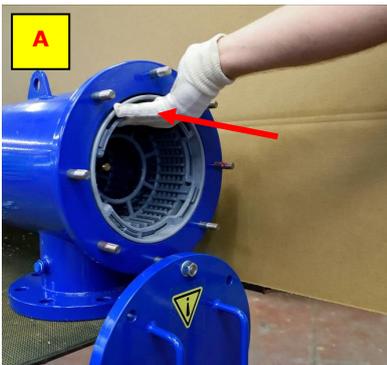



Parts Schedule MG112

| No. | CAT. No. | Description | Qty | Material |
|-----|---------------|---|-----|---------------|
| 1 | 710105-xxxxxx | MG-112LP HOUSING 12" PKPK 5010 ST.37-2 POLYESTER | 1 | ST.37-2 |
| 2 | 770102-000174 | PARKER O-RING 2-448 NBR 70 SHORE | 6 | NBR |
| 3 | 700190-001541 | COVER ASSY CAST-IRON W/PIS AND VALVE PISTON MOD | 3 | Various |
| 4 | 760104-000075 | STUD BOLT 1/2"UNCX50 LONG 20/12 S/ST303 | 45 | S/ST 303 |
| 5 | 760103-000077 | Flat Washer M12 DIN125 Zinc Plated C/ST | 48 | Z.Plated C/ST |
| 6 | 760102-000052 | HEX NUT 1/2"UNC C/ST ZINC PLATED B18.2.2 | 48 | Z.PLATED C/ST |
| 7 | 780101-000611 | REDUCER 2"X1 1/2" PP PLASSON | 3 | PP |
| 8 | 700190-001670 | DIRT COL.ASSY 6 NOZ+PARTITION STD M104XLP/110P | 3 | Various |
| 9 | 700190-001709 | M108LP/10P MOLDED SCREEN 300 MICRON ASSY | 3 | Various |
| 9.1 | 770102-000217 | DOWTY O-RING SEAL 674 ID=208.92MM TH=6.99MM NBR 55 SHORE NO FLASH | 3 | NBR |
| 10 | 700190-004629 | Injected Coarse Screen Assembly M108LP/M110P | 3 | PP+40% GF |
| 11 | 710105-000362 | M104/6LP COVER PKPK 5010 ST.37-2 POLYESTER | 3 | ST. 37-2 |
| 12 | 760104-000081 | STUD BOLT 1/2" UNC 92MM S/ST303 | 3 | S/ST 303 |
| 13 | 760190-000666 | RUBBER BOLT COVER 1/2" BLACK | 3 | Rubber |
| 14 | 900102-000318 | LABEL GENERAL DANGER CLEAR PVC BLACK/YELLOW 75X85MM ACRILIC SILK | 3 | NA |
| 15 | 900103-000001 | NAMEPLATE ENGLISH AL FILTOMAT SELF-C CE | 1 | Aluminum |
| 16 | 760105-000036 | RIVET BLIND 3X6 DIN 7337 S/ST316 | 4 | S/ST 316 |
| 17 | 730108-000120 | 1" Air Release Valve D-040-P BSPT | 1 | PP |
| 18 | 720501-000172 | L-CONNECTOR 3/8"M X12MM BSPT ACETAL BLACK TEFEN | 8 | PP Copolymer |
| 19 | 720501-000336 | Fitting Plug 3/8"M Blue | 1 | PE |
| 20 | 720501-000229 | L-CON. 1/4"M X8MM BSPT AC BLK-BLUE TEFEN | 4 | NYLON |
| 21 | 720501-000190 | PLUG 1/4"M BLUE | 7 | PVC |
| 22 | 780101-000946 | PLUG 3/4" BSP M PP PLASSON | 2 | PP |
| 23 | 700103-001764 | ADI-P DC KIT PACKAGE TWO SOLENOIDS NC | 1 | VARIOUS |
| 24 | 710103-011847 | BRACKET MG S/ST304 BOOSTER | 1 | S/ST304 |
| 25 | 700103-001763 | ADI-P DC KIT PACKAGE ONE SOLENOID NC | 1 | VARIOUS |
| 26 | 710103-011846 | BRACKET M100 PISTON S/ST304 BOOSTER | 1 | S/ST304 |
| 27 | 700190-006136 | AMIAD ACCELERATOR ASSEMBLY | 3 | VARIOUS |
| 28 | 760103-000128 | FLAT WASHER M16 DIN125 S/ST316 | 3 | S/ST 316 |
| 29 | 720501-000157 | COUPLING 3/8"F BSPT PA66 BLUE TEFEN | 3 | PA66 |
| 30 | 720502-000017 | CONTROL TUBE 8MM W/GREEN STRIPE | 4 | PA |
| 31 | 720502-000021 | CONTROL TUBE 12MM BLACK | 3 | PA |


Parts Drawing MG112

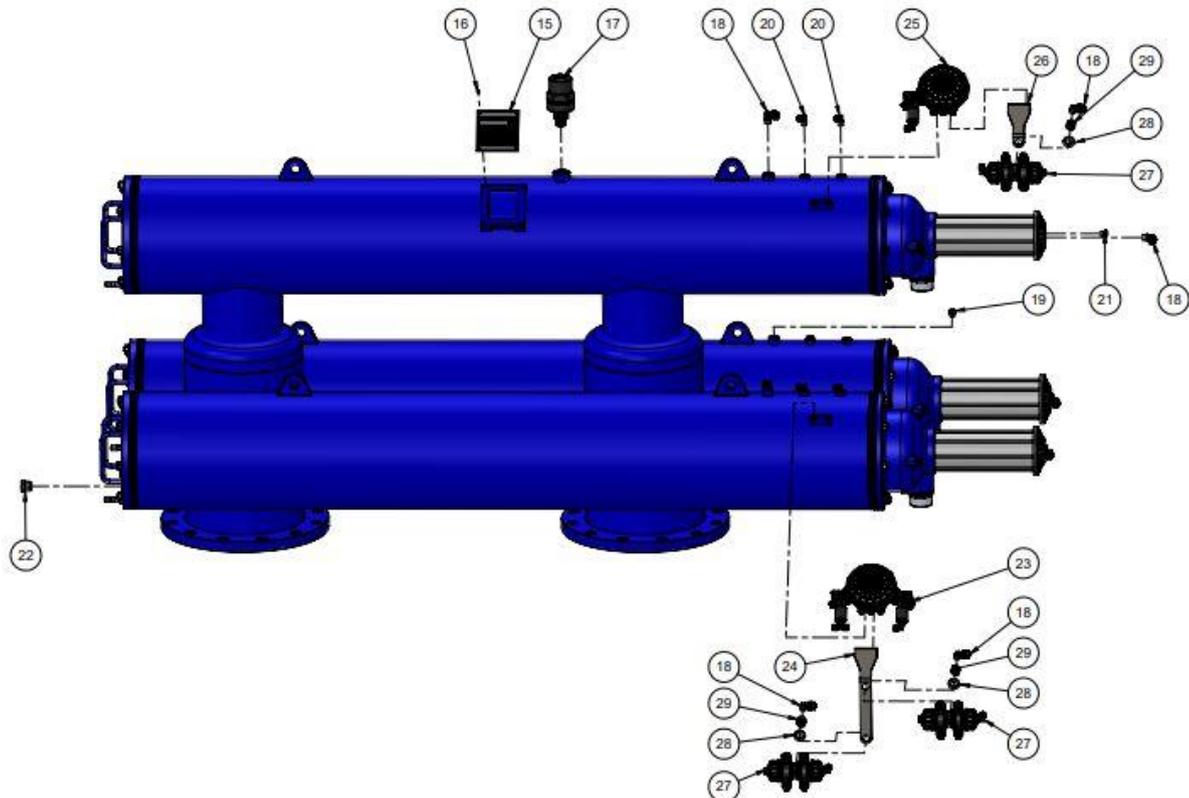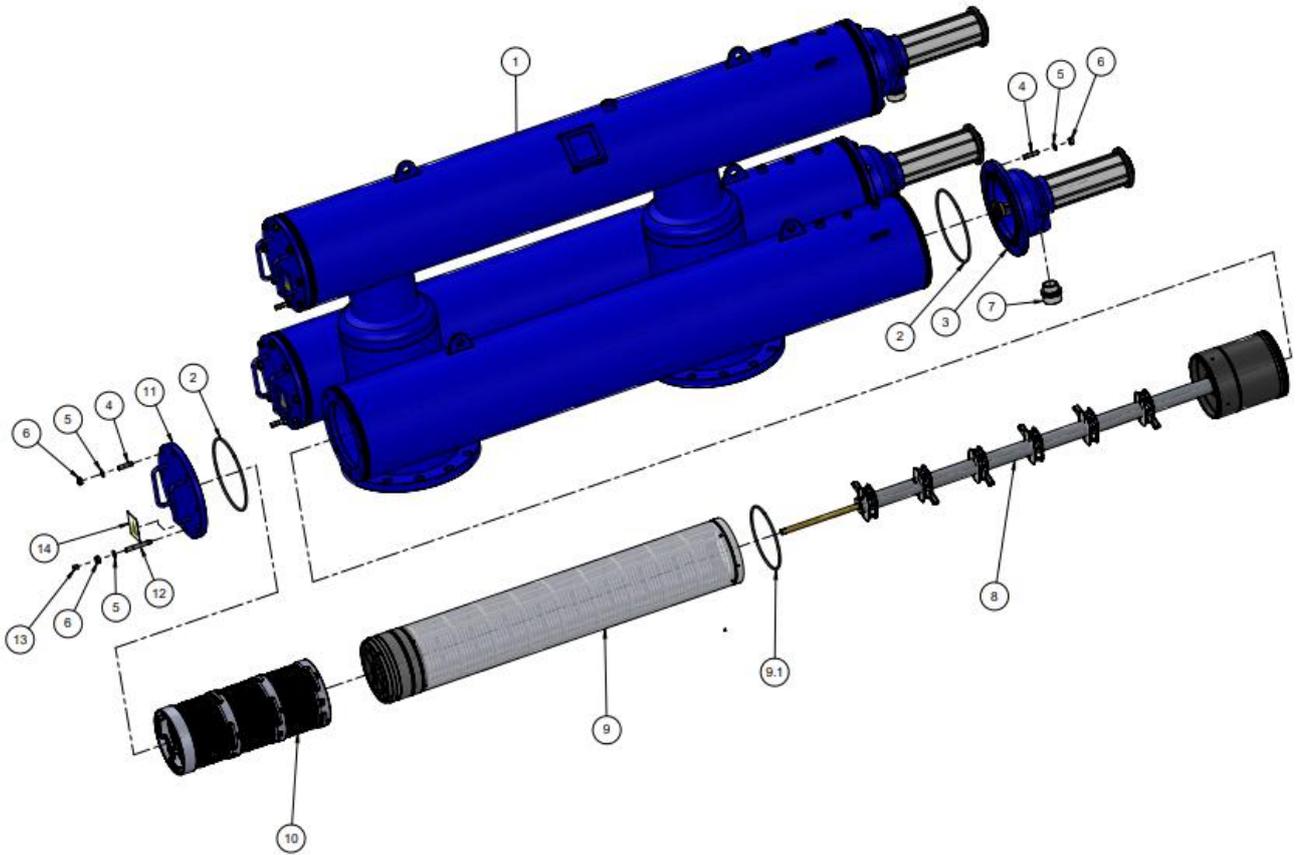

Control Tubes Scheme MG112

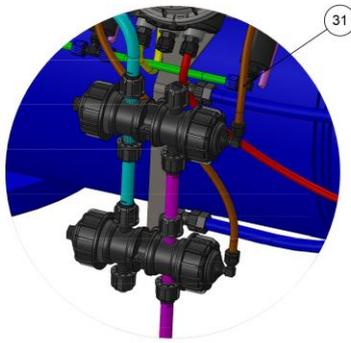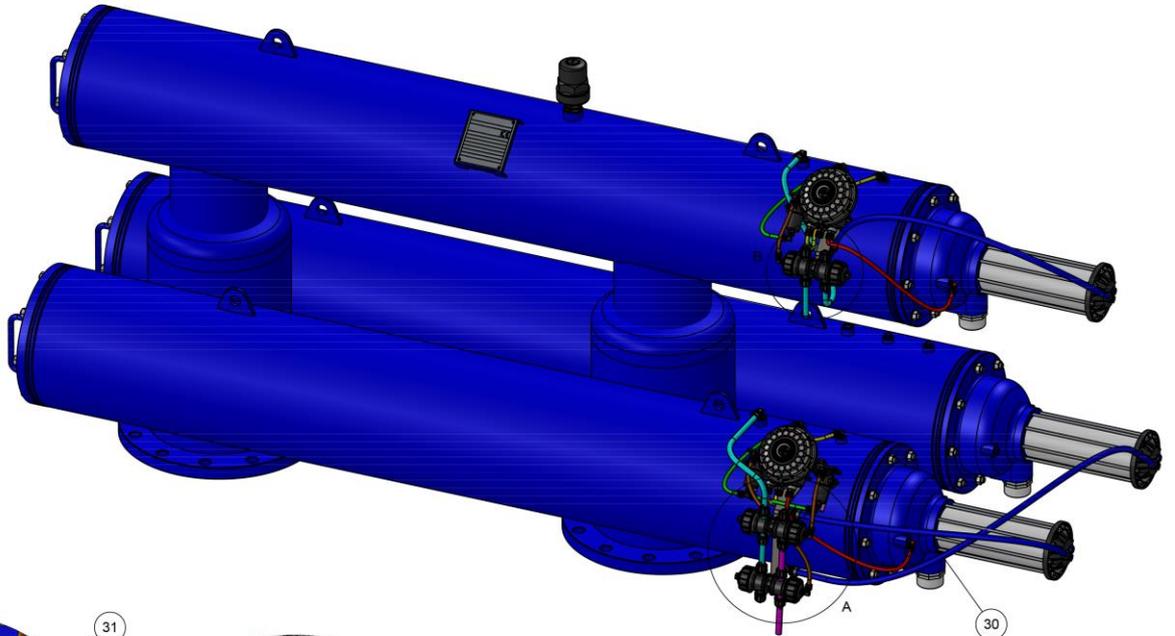

DETAIL A
SCALE 1 : 4

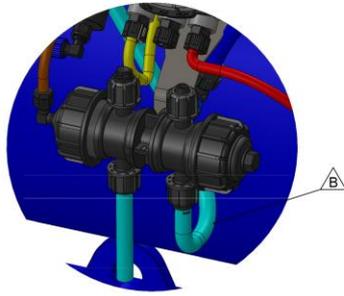


DETAIL B
SCALE 1 : 3

- Tube ϕ 8mm command tube from solenoid NC to accelerator
- High pressure
- Low pressure
- Water supply to solenoid
- Tube ϕ 12mm water supply to accelerator
- Tube ϕ 12mm water supply
- Tube ϕ 12mm vent


Dirt Collector - Parts Schedule & Parts Drawing

| No. | CAT No. | DESCRIPTION | Qty. | Material |
|------|---------------|--|------|-------------|
| 1 | 710103-000920 | Body Dirt Collector S/St304 (6 Noz) | 1 | S/ST 304 |
| 2 | 710103-001483 | Shaft Dirt Collector M-X04L/8L(P) Brass | 1 | Brass |
| 3 | 760102-000097 | NYLON INSERT LOCKNUT 1/4"UNC S/ST316 DIN985 | 12 | S/ST 316 |
| 4 | 710103-000800 | Central Support Collector | 1 | NYLON 30%GF |
| 5 | 710103-000802 | Upper Plug Collector | 1 | NYLON 30%GF |
| 6 | 760101-000688 | Phillips Pan Tap Screw #8x3/8" S/St316 | 12 | S/ST 316 |
| 7 | 710101-000704 | Nozzle Suction Oval Clamped | 6 | NYLON |
| 8 | 710101-000693 | Nozzle Suction OD52 Dirt Collector | 12 | NYLON 30%GF |
| 9 | 760101-000417 | Hex Bolt Partial Thread 1/4"UNCX1 1/4" S/ST304 | 12 | S/ST 304 |
| 10 | 710103-010021 | CONNECTOR M100 BRASS F/DIRT COLLECTOR | 1 | Brass |
| 11 | 710101-001614 | M100 FLUSHING CHAMBER RPP BLACK | 1 | RPP+30% GF |
| 12 | 710101-001629 | M100 TURBINE PISTON RPP BLACK | 1 | Various |
| 12.1 | 710103-011620 | BEARING M100 PISTON K110/D2 | 1 | K110/D2 |

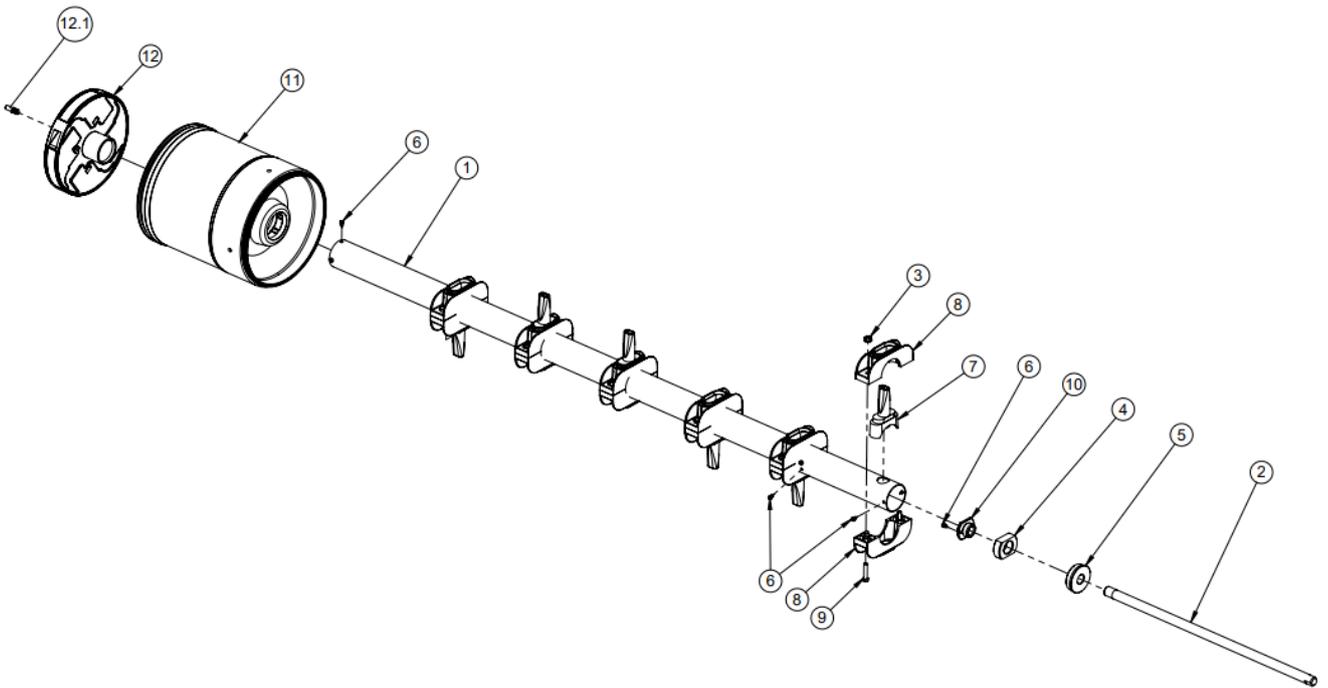

Cover - Parts Schedule & Parts Drawing

| No. | CAT No. | DESCRIPTION | Qty. | Material |
|-----|---------------|---|------|-----------|
| 1 | 710103-000819 | Cover 8 Holes Blue M10X(X)(L) | 1 | Cast Iron |
| 2 | 710103-000901 | Seat Valve Seal M106 (Cast-Iron Cover) | 1 | Delrin |
| 3 | 710103-000902 | Ring Retaining Cover Seat Seal M106 | 1 | PVC |
| 4 | 770102-000156 | O-Ring Seal (P2-351) 50+5 NBR | 1 | NBR |
| 5 | 710103-000869 | Rod Piston M1XX(L)(P) S/St316 | 1 | S/ST 316 |
| 6 | 770102-000126 | O-Ring Seal (P2-237) Nat | 2 | NBR |
| 7 | 710103-000900 | Holder Cylinder Seal M1XX(L)(P) Delrin | 1 | Delrin |
| 8 | 770105-000019 | Seal U-Ring 95x75x10 65+-5 NBR | 2 | NBR |
| 9 | 710103-000843 | Cylinder for M10X(L)(P) Piston ID95 S/St316 | 1 | S/ST 316 |
| 10 | 710103-000799 | Plug Piston M10X(L)(P) | 1 | PP |
| 11 | 760103-000094 | Flat Washer M6 DIN125 S/ST316 | 8 | S/ST 316 |
| 12 | 760102-000097 | NYLON INSERT LOCKNUT 1/4"UNC S/ST316 DIN985 | 8 | S/ST 316 |
| 13 | 770102-000058 | O-Ring Seal 009 NAT | 10 | NBR |
| 14 | 760102-000078 | Hex Nut 1/4"UNC S/ST316 B18.2.2 | 5 | S/ST 316 |
| 15 | 720501-000908 | L-Connector 1/4"MX8MM Red-Blue | 1 | RPP |
| 16 | 710103-000903 | Rod Tie M106 Cover Cylinder S/ST303 | 8 | S/ST 303 |
| 17 | 710104-000039 | RL For Valve Seat New | 1 | NBR |
| 18 | 710103-000895 | Spacer Bolt Valve | 3 | S/ST 303 |
| 19 | 710104-000040 | Bearing Valve Combined Assy. RL | 1 | Rubber |
| 20 | 710103-001037 | Seat Valve Seal | 1 | Brass |
| 21 | 710103-001038 | Housing Bearing Valve Brass | 1 | Brass |
| 22 | 720501-000190 | Plug 1/4"M Blue | 1 | PVC |

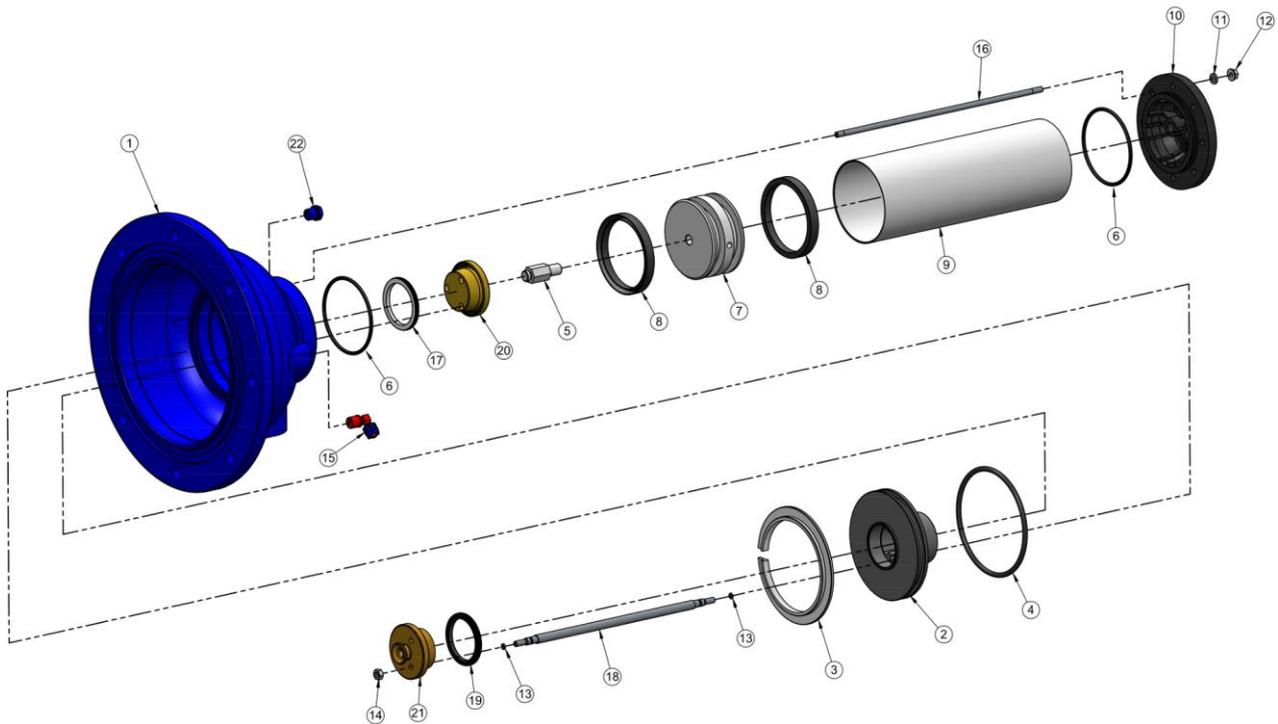


Amiad Limited Warranty

1. This certificate applies to Amiad Water Systems Ltd. ("Amiad") products purchased by you (the "Buyer") from Amiad unless specifically agreed otherwise in writing by Amiad. This Warranty extends only to the original purchaser, and is not transferable to anyone who subsequently purchases, leases, or otherwise obtains the product from the original purchaser.
2. Amiad hereby warrants that the products are and will be free from defects in material and workmanship under normal use and service. Amiad warrants that it will correct manufacturing defects in the products, in accordance with the conditions set out in this Warranty.
3. This Warranty is enforceable for a period of 12 months after the date upon which the products were delivered (the "Warranty Period").
4. In the event that during the Warranty Period the Buyer discovers a defect in material and/or workmanship in any product or part (the "Defective Product"), it shall submit a written complaint to Amiad using Amiad's standard Buyer Complaint Form. For the receipt of the Buyer Complaint Form, the submission of the complaint or any questions please contact your service representative.
5. Upon written demand by Amiad the Buyer shall return the Defective Product - or a sample thereof - to Amiad, at Amiad's cost. If the Buyer ships any such Defective Product, Amiad suggests the Buyer package it securely and insure it for value, as Amiad assumes no liability for any loss or damage occurring during shipment. Provided however that in the event Amiad determines that this Warranty does not apply to such product, Buyer shall promptly reimburse Amiad for such cost (including freight and customs). Any returned product or part must be accompanied by the Warranty certificate and the purchase invoice. It is clarified that the Buyer may not return the Defective Product unless such return was coordinated and approved by Amiad in advance.
6. Amiad's obligation under this Warranty shall be limited to, at Amiad's option, the repair or exchange, free of charge, of the product or any part which may prove defective under normal use and service during the Warranty Period. The provision of a repair or replacement of a product during the Warranty Period will result in an extension of the Warranty Period by an additional period of 12 months, provided that the total accumulated Warranty Period shall in any event be no more than 18 months from the date upon which the products were delivered.
7. This Warranty is valid on the condition that the products are installed according to Amiad's instructions as expressed in Amiad's instruction manuals and according to the technical limitations as stipulated in Amiad's literature or as stated by a representative of Amiad.
8. This Warranty will not apply to damaged or defective products resulting from or related to:
 - (i) Fire, flood, power surges or failures or any other catastrophe and/or unforeseen occurrence, such as but not limited to those for which the Buyer is customarily insured for, or any force majeure events;
 - (ii) Fault, abuse or negligence of the Buyer;
 - (iii) Intake water not meeting the agreed standards, as set forth in a written document, approved by Amiad, or improper storage;
 - (iv) Improper or unauthorized use of the product or related parts by the Buyer, including Buyer's failure to operate the product in conformity with the recommendations and instructions of Amiad, as set forth in Amiad's manuals and other written materials, the operation of the product other than by a trained and qualified operator, or improper installation of the product by a third party not authorized by Amiad;
 - (v) Performance by the Buyer of maintenance or operation other than in conformity with the recommendations and instructions of Amiad, or other than in accordance with procedures defined in the literature supplied for products (including the timely replacement of requisite parts), and for services provided other than by a trained and qualified advanced operator; or
 - (vi) Any alteration, modification, foreign attachment to or repair of the products, other than by Amiad or its authorized technical representatives.
9. In no event shall Amiad be liable to the Buyer or any third party for any damages to property, or for any intangible or economic loss, including loss of profits, loss of customers or damage to reputation, for any damages, including indirect, special, consequential damages, or punitive damage arising out of or in connection with this Warranty, or arising out of or in connection with the product's performance or failure to perform, even if it has been advised of the possibility of such damages.
10. Amiad will be excused for failure to perform or for delay in performance hereunder if such failure or delay is due to causes beyond its reasonable control or force majeure preventing or hindering performance.
11. This Warranty set forth herein is the only contractual warranty given by Amiad and is provided in lieu of any other warranties created by any documentation, packaging or otherwise.
12. Amiad makes no warranty whatsoever in respect to accessories or parts not supplied by Amiad. In the event that Amiad is required to correct a Defective Product or product not covered by this Warranty, it will do so solely in consideration for additional fees.
13. The parties will actively endeavor to amicably settle any dispute arising between them. In the event that the parties are unable to reach an equitable settlement of such dispute, any claim or lawsuit related to the Warranty, its validity execution, its performance be brought before only the courts of Tel-Aviv, Israel. Israeli law will govern the Warranty, to the exclusion of any conflict of law rules.



Manufacturer

Amiad Water Systems Ltd. D.N. Galil Elyon 1, 1233500, Israel.
Tel: +972 4690 9500 | Fax: +972 48141159 | Email: info@amiad.com

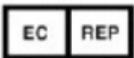

European Authorised Representative for CE

Obelis s.a. Bd Général Wahis 53, 1030 Brussels, Belgium.
Tel: +(32) 2732 5954 | Fax: +(32) 27326003 | Email: mail@obelis.net

EC Declaration <https://www.amiad.com/certificatesDownload.asp>